

# Quick Installation Guide

PROLiNK Hurricane 9601 USB ADSL Modem

Version 1.0

## Package Contents

1. One H9601 Modem
2. One USB cable
3. One RJ-11 DSL cable
4. Installation CD
5. Quick Installation Guide



## Minimum System Requirement

- . Windows 98SE/ME/2000/XP /Vista
- . 32 MB RAM / 30 MB HD
- . CD-ROM Drive
- . USB Port

## Technical Support Information

Tel: (65) 62965455  
 9am-5:45pm (Mon-Fri)  
 9am-1pm (Sat)  
 Closed on Sundays and Public Holidays  
 Email: support@fida.com  
 Address: Blk 105 Boon Keng Rd #06-13  
 Singapore 339776

## Step A . Hardware Connection

- Connect one end of the USB cable to the USB port of your computer.
- Connect the other end of USB cable to the ADSL Modem.
- Connect One end of telephone cable to the 'LINE' jack of the ADSL Modem.



- Plug the other end of the telephone cable into the telephone wall jacket.

## Step B. Driver Installation

- Power on your PC to start Windows. when detecting new hardware window appears, Click "Cancel" to exit
- Place the Hurricane 9601 installation CD into your CDROM drive.



The CD should auto-run within seconds.



If not, awake the setup manually: -

e.g. Start >> Run>> D:\autorun.exe

- Click "I Install Driver" .




- Select the correct country and telecom to continue.



- Enter Your userName and password provide by ISP.




- Click Next to continue.

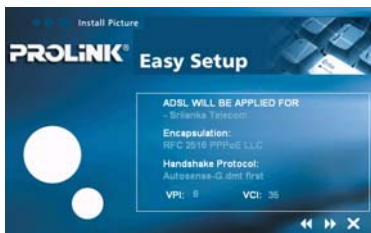

- When the following appears, Press X to exit



## Step C. Logon to the internet

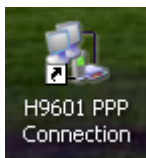

- Double Click the "H9601 PPP Connection" Icon.
- Enter your Username and Password, then click Dial Button to connect to the internet.

- Connection Icon  shows that you have connected to the Internet successfully.

